




ASUS Chromebook C200MA DS01 Wireless Card Replacement

Asus Chromebook C200ma Wireless Card replacement

Written By: Christopher Lim

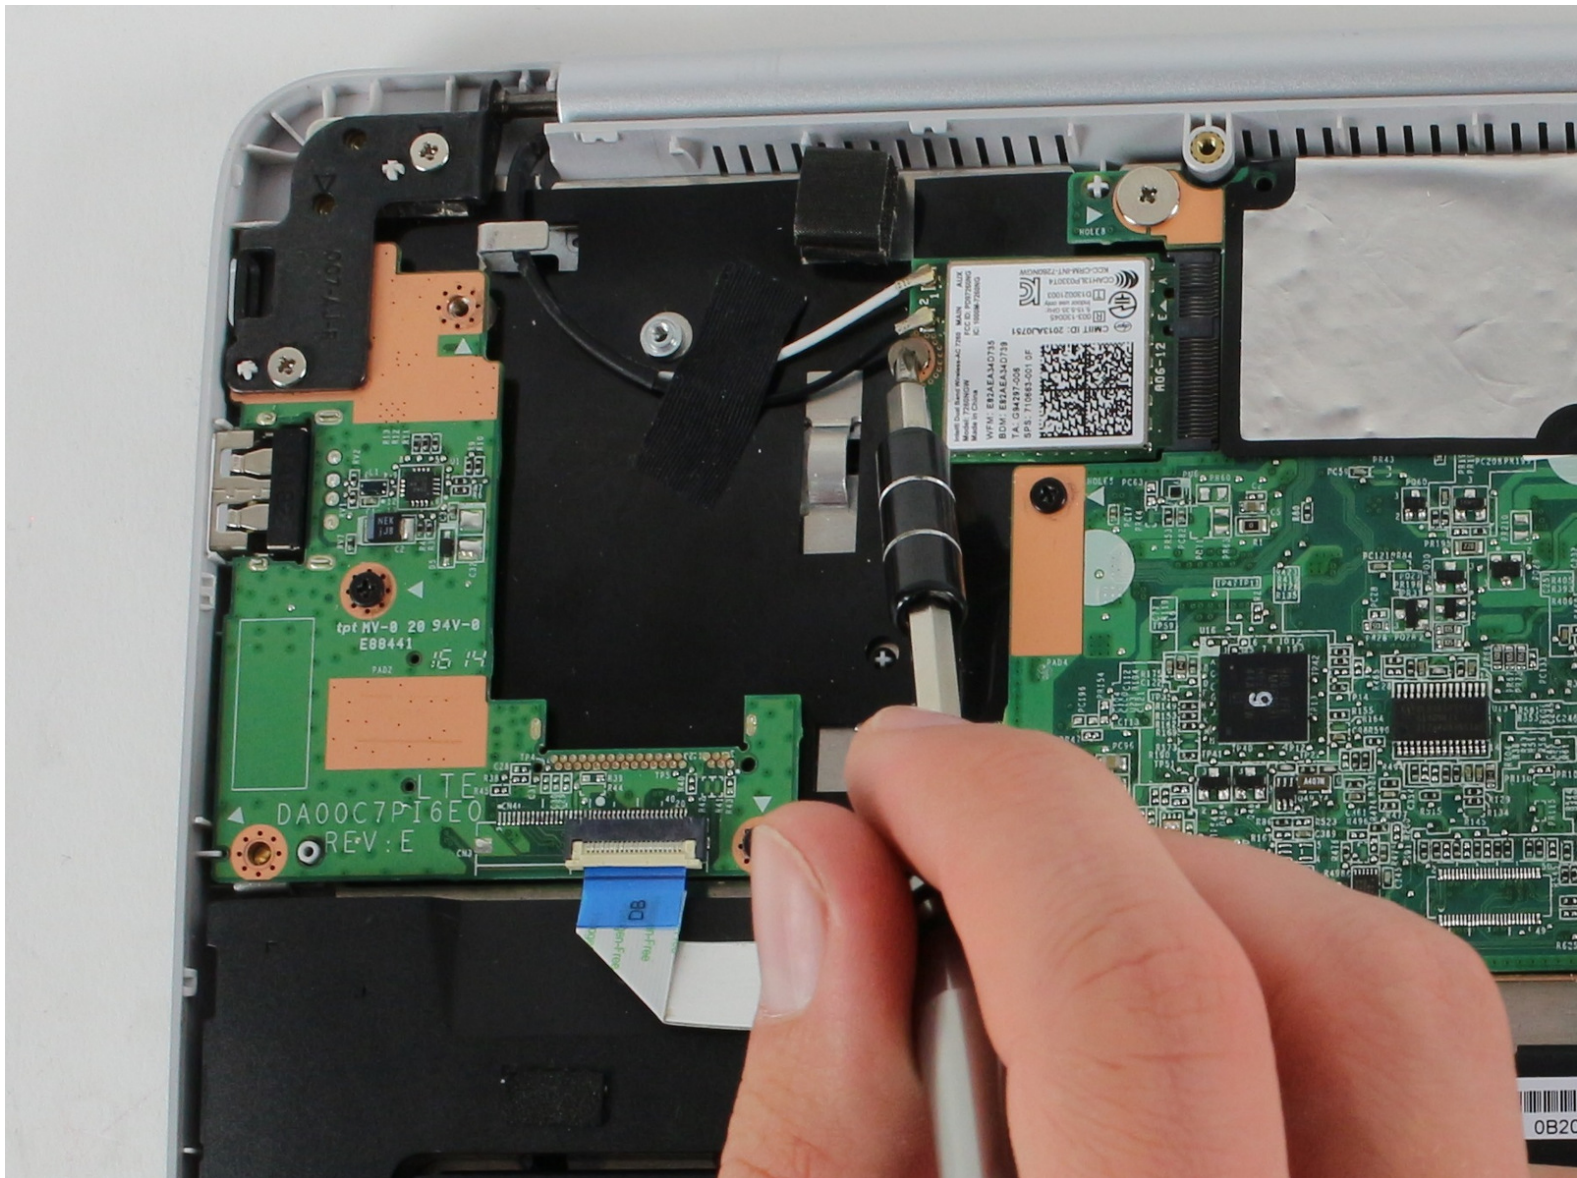

INTRODUCTION

This guide will take you through a step-by-step process for the removal of your Chromebook's wireless card.




TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Panel



 Before proceeding, power down your Chromebook. Close the display and lay it on a soft surface, top-side down.

- Remove the five 8.4 mm Phillips #0 screws.
- Remove the four 4.6 mm Phillips #0 screws.

Step 2






- Use the plastic opening tool to gently work around the edge of the Chromebook until the back panel starts to lift off.

Step 3



- Remove the back panel by lifting it away from the Chromebook.
- ❗ Some clicking will be heard as the panel is removed from the back, this is completely normal.

Step 4 — Battery Connection

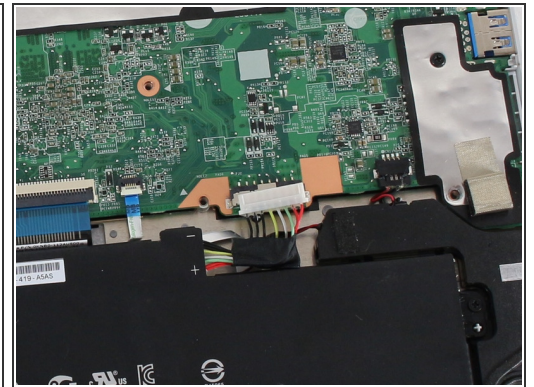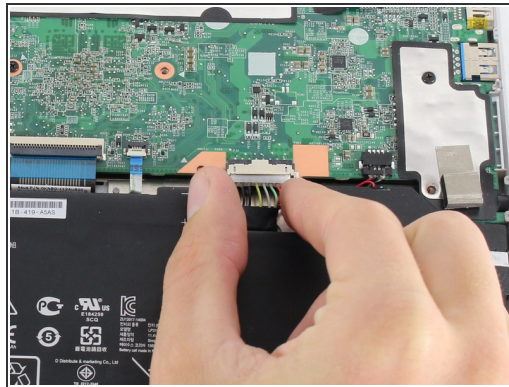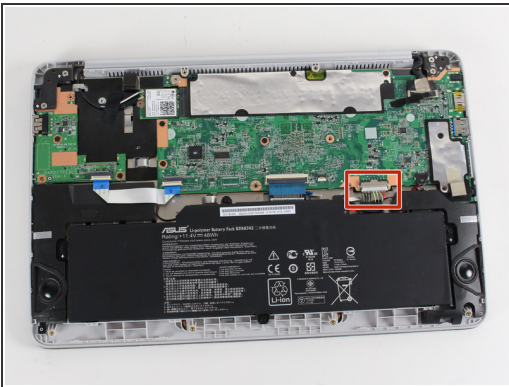


- To disconnect the battery, pinch the multi-color bundle cable with your thumb and forefinger and pull directly back.

Step 5 — Wireless Card



- Remove the silver 2.8 mm Phillips #0 screw from the wireless card.

Step 6

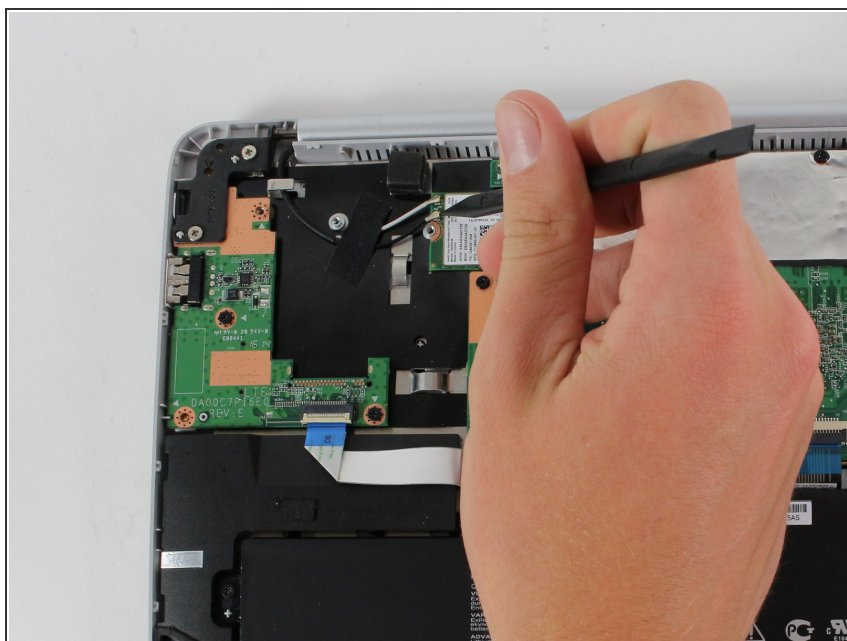

- Use a spudger to disconnect the white and black antenna cables connected to the wireless card.

Step 7



- Grab the wireless card between your thumb and index finger and pull directly away from the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-17 04:15:55 PM.